





neoConnex geoCoder Set-up Guide

1. Connect a monitor to the geoCoder appliance and power on the box
2. After it has fully powered on it will display the IP
3. In a web browser enter the IP shown in step 2, with :8080 at the end of the IP (ie 192.168.2.10:8080)
4. Username is admin and password is admin

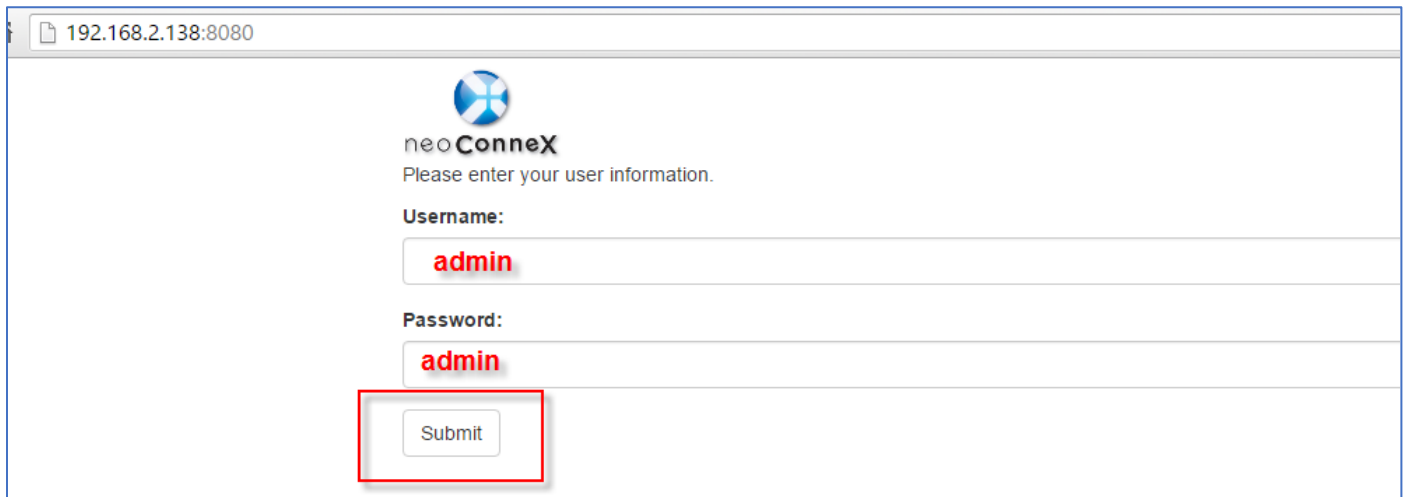


192.168.2.138:8080


neoConnex
Please enter your user information.

Username:

Password:

5. Click submit button
6. Click on the Networking tab at the top left of the page (Figure 2)

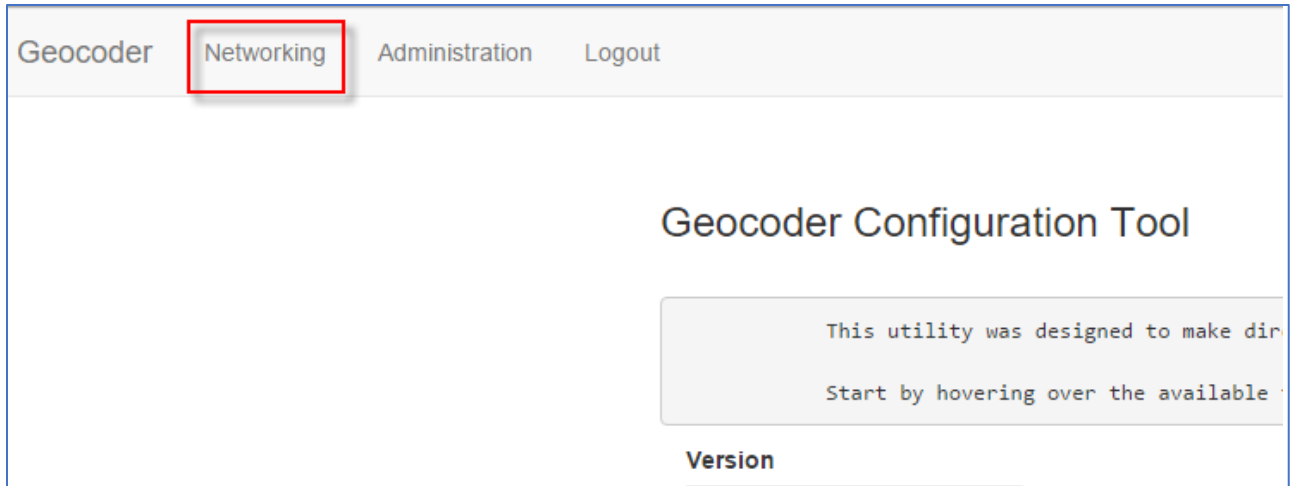

7. Click on the static option from the IP Configuration

8. Enter the IP address, Netmask and Gateway that you would like the geoCoder box to be set to. (Figure 3)

***Required Field**

IP Configuration

DHCP Static

IP Address

192.168.2.138 *

Netmask

255.255.255.0 *

Gateway

192.168.2.1 *

Submit

9. In the neoConnex Fleet Manager, Click on the Geocoder tab, then the Settings tab then select the TBGeocoder option (Figure 4)

neoConneX Status Presence Setup Traffic Clients Customers Departments Units Groups Permissions DbBackup **Geocoder**

General

Settings

Geocoder Service Settings:

- Open Street Map
- MapQuest
- Google User API
- Google Work API
- TBGeocoder**

IP:

Geocoder Background Settings:

Background Geocoder Enable

Save

10. Click the Save button.